




DUMMY MORTISE LOCKSET

BACK TO BACK DM 172 SECTIONAL (Through bolts)


A Door preparation


1. Draw backset vertical line and lever/knob centerline on door.
2. Apply installation template on door, align backset vertical lines and lever/knob centerlines.
3. Drill required holes as per supplied template.

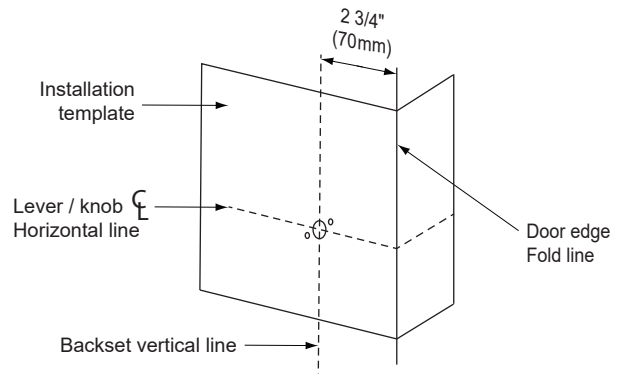

B Installation instructions

1. Insert bushing into outside lever/knob assembly
2. Place spindle fixing assembly on outside lever assembly, ensure side with long spindle is facing towards lever/knob
2. Position outside lever assembly in post holes on door (ensure lever handle is in horizontal position)
4. Using two posts of outside lever/knob as a guide, slide spindle fixing assembly on outside door.
5. Position inside mounting plate on the inside spindle fixing assembly and place assembly on the door inside surface over the outside lever/knob posts and secure with supplied machine screws
6. Slide rose over mounting plate, thread the inside lever/knob and tighten with supplied spanner tool.

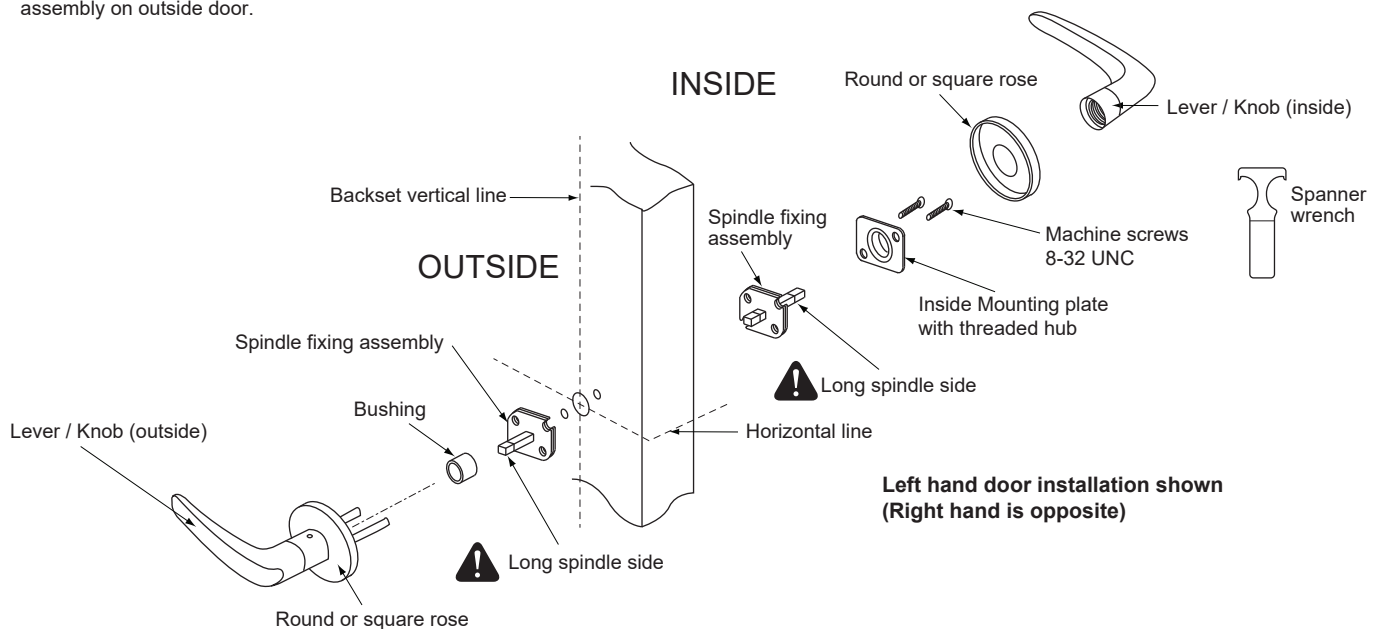


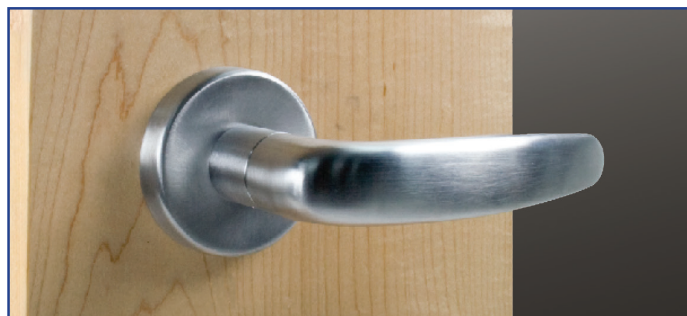

FACTICE
SERRURE MORTAISE
DOS À DOS
DM 172 SECTIONNELLE
(Boulons traversants)


A Préparation de la porte

1. Tracez la ligne verticale d'écartement et la ligne horizontale pour le levier / bouton sur la porte.
2. Appliquez le gabarit d'installation sur la porte, alignez la ligne verticale d'écartement et la ligne horizontale pour le levier / bouton.
3. Percez les trous nécessaires selon le gabarit fourni.

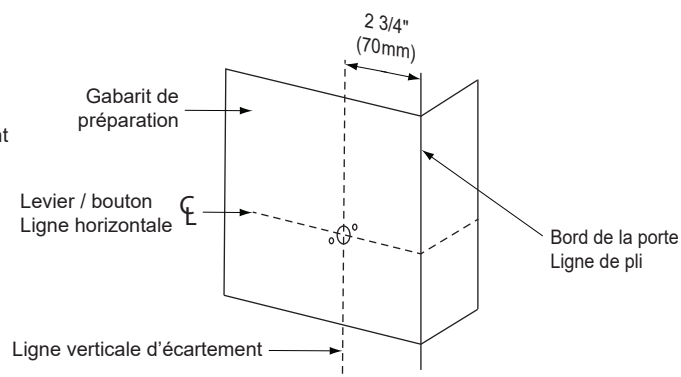

B Instructions d'Installation

1. Insérez la bague dans levier / bouton extérieur.
2. Placez la pièce de fixation pour l'axe dans le levier / bouton extérieur, assurez-vous que le long bout de l'axe fait face au levier / bouton.
2. Positionnez les pièces du levier dans les trous de la porte (assurez-vous que la poignée du levier est en position horizontale).
4. Utilisez les deux tiges du levier / bouton extérieur comme guide, faites glisser la pièce de fixation de l'axe sur la porte extérieure.
5. Positionnez la plaque de montage intérieur sur la pièce de fixation pour l'axe intérieur et assembler les pièces sur la surface du côté intérieur de la porte vis-à-vis les tiges du levier / bouton extérieur et fixer avec les vis mécaniques fournies.
6. Placez la rosette sur la plaque de montage, enfiler le levier / bouton intérieur et serrer avec la clé fournie.

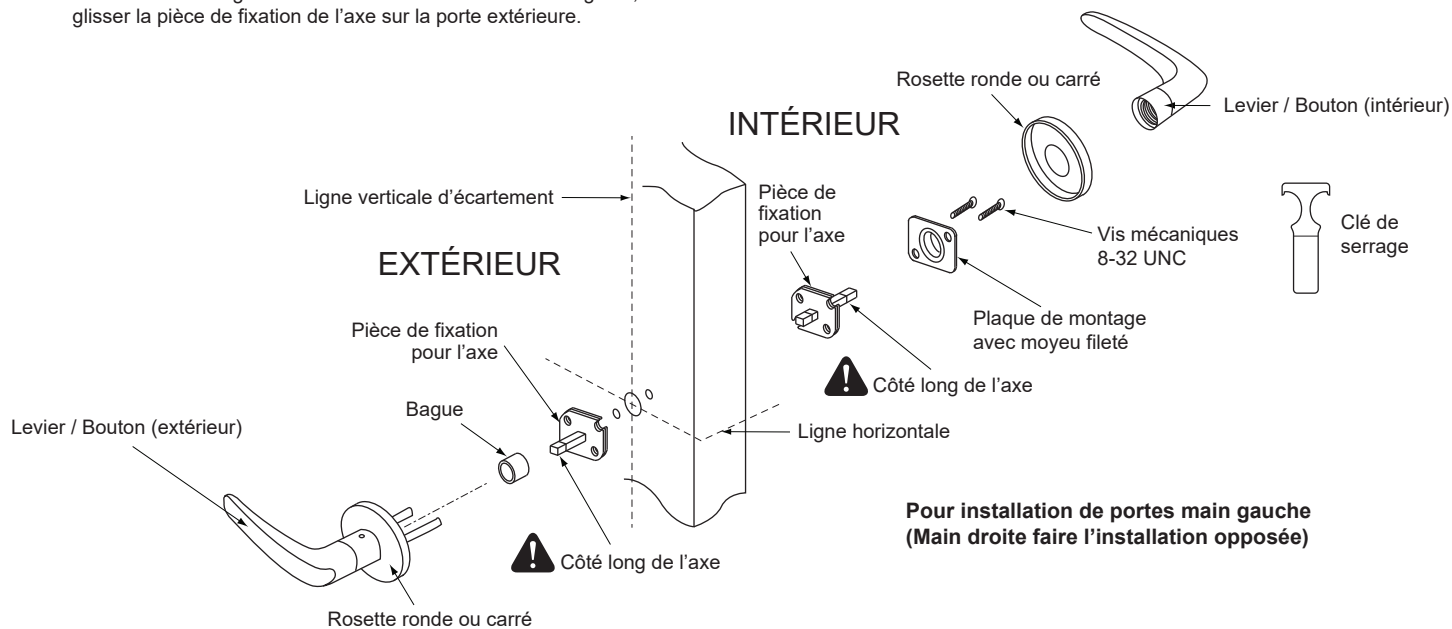

**Pour installation de portes main gauche
(Main droite faire l'installation opposée)**