

DOREX® T300 COMBO



Ø5/16" (8 mm),
5/16" (8 mm) deep

Optional - see instructions for details

BACKSET ÉCARTEMENT

**FOLD HERE
PLIEZ ICI**

70mm (2-3/4")

60mm (2-3/8")

3-59/64" (997 mm)


Ø2-1/8" (54 mm)

Mark Ø1" (25.4 mm) hole
at centre of door edge.
Then drill 1" (25.4mm) hole.



57 51 45
2-1/4" 2" 1-3/4"

Marquez un trou
de Ø1" (25,4 mm)
au centre du bord de
la porte. Puis percez un
trou de 1" (25,4mm).

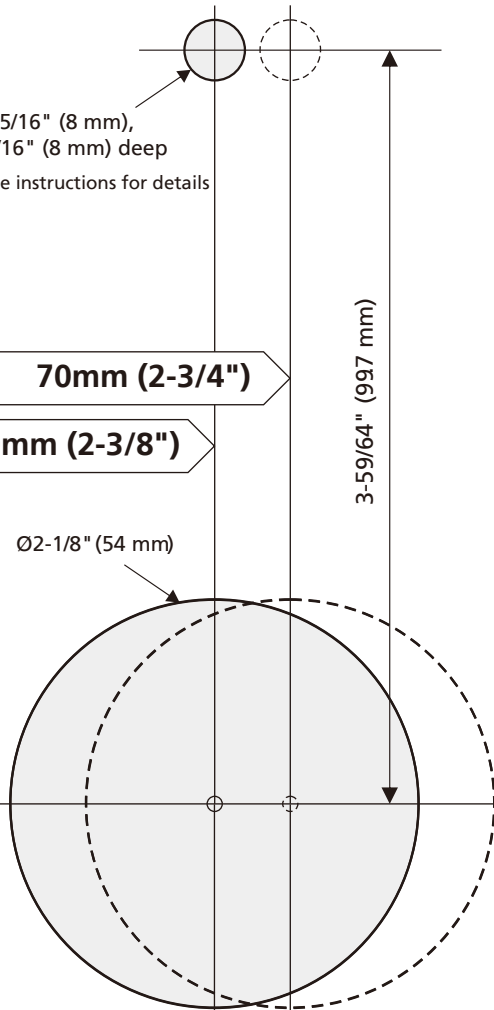

DOREX[®] T300 COMBO

FOLD HERE
PLIEZ ICI

BACKSET
ÉCARTEMENT

70mm (2-3/4")

60mm (2-3/8")

3-59/64" (997 mm)

Ø2-1/8" (54 mm)

! Ø5/16" (8 mm),
5/16" (8 mm) deep
Optional - see instructions for details

Mark Ø1" (25.4 mm) hole
at centre of door edge.
Then drill 1" (25.4mm) hole.

57 51 45
2-1/4" 2" 1-3/4"

Marquez un trou
de Ø1" (25,4 mm)
au centre du bord de
la porte. Puis percez un
trou de 1" (25,4mm).

T300T-COMBO-DEADBOLT-TPL-EF 2025/03

DOREX[®] T300 COMBO

FOLD HERE
PLIEZ ICI

BACKSET
ÉCARTEMENT

70mm (2-3/4")

60mm (2-3/8")

3-59/64" (997 mm)

Ø2-1/8" (54 mm)

! Ø5/16" (8 mm),
5/16" (8 mm) deep
Optional - see instructions for details

Mark Ø1" (25.4 mm) hole
at centre of door edge.
Then drill 1" (25.4mm) hole.

57 51 45
2-1/4" 2" 1-3/4"

Marquez un trou
de Ø1" (25,4 mm)
au centre du bord de
la porte. Puis percez un
trou de 1" (25,4mm).

T300T-COMBO-DEADBOLT-TPL-EF 2025/03